

JISLON NF VERGE MARKER INSTALLATION SHEET




1. Brush away any dirt or stones




2. Burn off any dust




3. Place largest round piece of super bundy and apply heat. The material will start to bubble, go slightly darker in colour and the edges should fall onto the surface.
NOTE "Slow Cook" the material with the burner by holding the burner slightly higher and keep moving constantly.
DON'T heat too intensely.

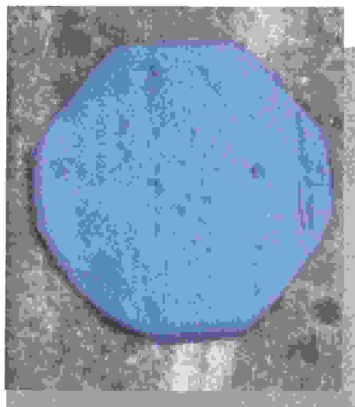

4. Place next largest piece on top in the middle and melt as above.

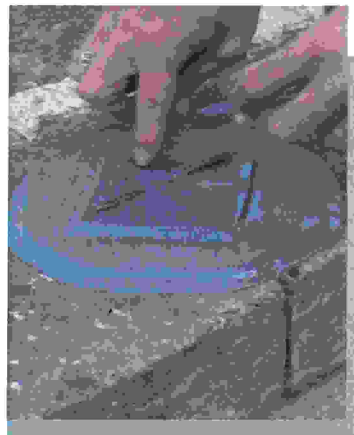

5. Put smallest piece on top in the middle and melt as above.

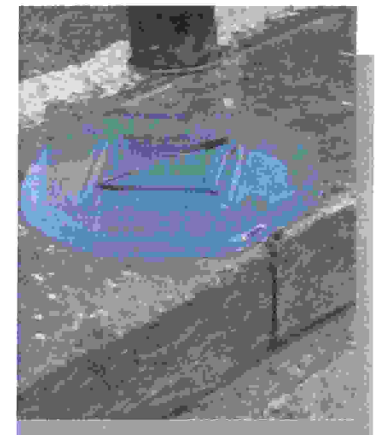

6. Take NF Verge Marker and push down firmly making the mound of glue go up inside the middle of the pole cones and spread across to whole base of product.



7. Leave for 5-10 mins to harden up.

